Assembly Instructions

If you need help or have damaged or missing parts, please email: **SERWALL@patioadirondack.com**

⚠ Caution: Please do not over-tighten bolts and screws during assembly.

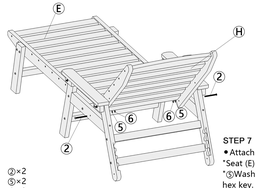

②×2
⑤×2
⑥×2

STEP 7

● Attach "Backrest (H)" to completed "Seat (E)" - Using "②M6 x 60MM Bolts", "⑤Washers" and "⑥Nuts", tighten with hex key.

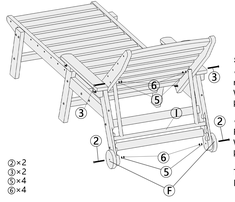

②×2
③×2
⑤×4
⑥×4

STEP 8

● Attach "Reclining Adjuster(I)" to Backrest-Using "③M6 x 50MM Bolts","⑤Washers" and "⑥Nuts",tighten with hex key.

● Attach "Wheels(F)" to the Armrest Frames - Using "②M6 x 60MM Bolts", "⑤Washers" and "⑥Nuts", tighten with hex key.

To ensure the wheels function properly,please do not over tighten the nuts.

HDPE Chaise Lounge

Assembly Instructions | **A041-035-001**

SERWALL
ONE DAY， MEET YOUR ADIRONDACK

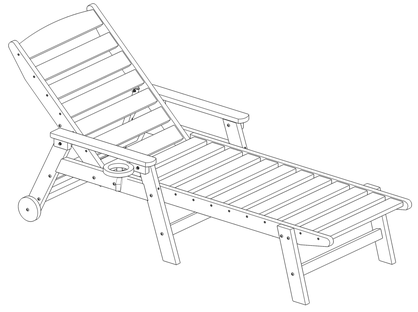

Important - Please read these instructions fully before starting assembly

HASSLE-FREE WARRANTY

Serwall stand behind the quality of our products.
For full warranty policy, email: **SERWALL@patioadirondack.com**

360 LBS CAPACITY | 1 PERSON ASSEMBLY | AROUND 15 MIN. ASSEMBLY

Safety & Care Advice

If you need help or have damaged or missing parts, please email: **SERWALL@patioadirondack.com**

Important - Please read these instructions fully before starting assembly

Check you have all the components and tools listed on the pages 3.

Remove all fittings from the plastic bags and separate them into their groups.

Keep children and animals away from the work area, small parts may cause choking if swallowed.

Make sure you have enough space to layout the parts before starting.

Assemble on a soft level surface to avoid damaging the unit or your floor.

Do not stand or put weight on the product, this could cause damage.

Assemble the item as close to its final position (in the same area) as possible.

Do not place furniture directly in front of radiators, fires, or any other source of heat.

The assembly will be easier with 2 people while 1 person could also do the job.

General care & maintenance

Using damp cloth and mild detergent for routine maintenance, do not use blench or abrasive cleaners.

From time to time check that there are no loose screws on this unit.

Clean & Sanitize Tips

Use this method for a quick clean-up here and there throughout the season — adding in the bleach solution to easily sanitize and eliminate any stubborn stains or dirt build-up from the winter months.

- Mix mild dish soap and warm water in a bucket.
- Use a clean cloth to wipe the soapy mixture onto the surfaces of your furniture, cleaning off any dirt.
- For extra cleaning power or to sanitize, mix 1/3 bleach and 2/3 water.
- Apply bleach mixture to furniture with a clean cloth and allow it to sit on the lumber for a few minutes (this will not affect the color).
- Loosen any dirt and debris that may catch in the surface grooves of the lumber by scrubbing the bleach mixture with a soft-bristle brush.
- Rinse thoroughly using a garden hose with a spray nozzle.

Components

If you need help or have damaged or missing parts, please email: **SERWALL@patioadirondack.com**

Please check you have all the components listed below.

Note: The illustration of the chair shows the exact position of each part. Check when assembling.

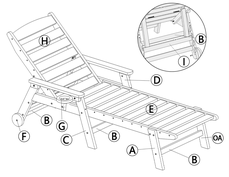

#	Description	Qty.
A	Right Front Leg	1
0A	Left Front Leg	1
B	Stretchers	4
C	Right Armrest Frame	1
D	Left Armrest Frame	1
E	Seat	1
F	Wheels	2
G	Cup Holder	1
H	Backrest	1
I	Reclining Adjuster	1

Hardware & Tools

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than required.

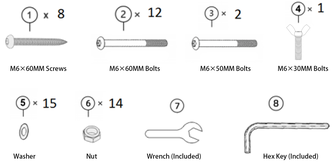

Assembly Instructions

If you need help or have damaged or missing parts, please email: **SERWALL@patioadirondack.com**

⚠ Caution: Please do not over-tighten bolts and screws during assembly.

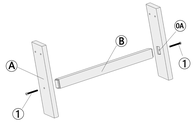

①×2

STEP 1

Attach "Right Front Leg(A)" and "Left Front Leg (0A)" with 1 "Stretcher(B)" - Using "① M6 x 60MM Screws", tighten with hex key.

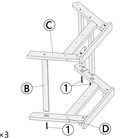

①×3

STEP 3

Assemble "Armrest Frame (D)" with 3 "Stretchers (B)" - Using "③M6 x 60MM Screws", tighten with hex key.

For easy assembly, please place the "Armrest Frame (D)" flat on the ground, insert the stretchers' tenons into the mortises from top to bottom, and then tighten them with screws.

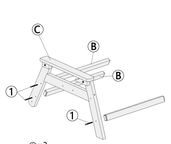

①×3

STEP 2

Assemble "Armrest Frame (C)" with 3 "Stretchers (B)" - Using "①M6 x 60MM Screws", tighten with hex key.

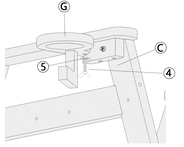

④×1
⑤×1

STEP 4

Attach "Cup Holder (G)" to "Right Armrest Frame (C)" - Using "④M6 x 30MM Bolt " and "⑤Washers" ,tighten with hand.

Assembly Instructions

If you need help or have damaged or missing parts, please email: **SERWALL@patioadirondack.com**

⚠ Caution: Please do not over-tighten bolts and screws during assembly.

②×4
⑤×4
⑥×4

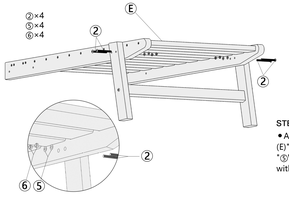

STEP 5

● Attach Front Legs (A) to "Seat (E)" - Using "②M6 x 60MM Bolts", "⑤Washers" and "⑥Nuts", tighten with hex key.

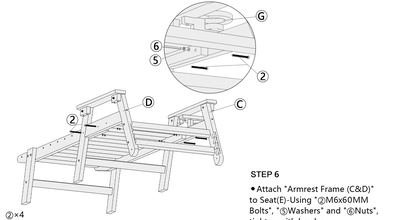

②×4
⑤×4
⑥×4

STEP 6

● Attach "Armrest Frame (C&D)" to Seat(E)-Using "②M6x60MM Bolts", "⑤Washers" and "⑥Nuts", tighten with hex key.